


LTC SERIES LINEAR POTENTIOMETER

“4-20mA Quick Connection Guide”

WARNING !


Never connect the power supply cable to pin 2 while socket connection. Otherwise the scale card circuit and contacts may be damaged. In this case, the device will be **out of warranty**.

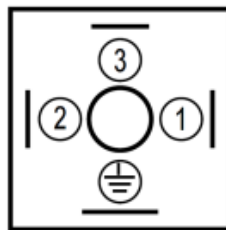

Connections	
Pin 1	+24VDC Supply
Pin 2	Analog Output 4-20 mA
Pin 3	Ground

Note: Supply and signal output common GND line. So 3-wires cable can be connected.

SAMPLE APPLICATION

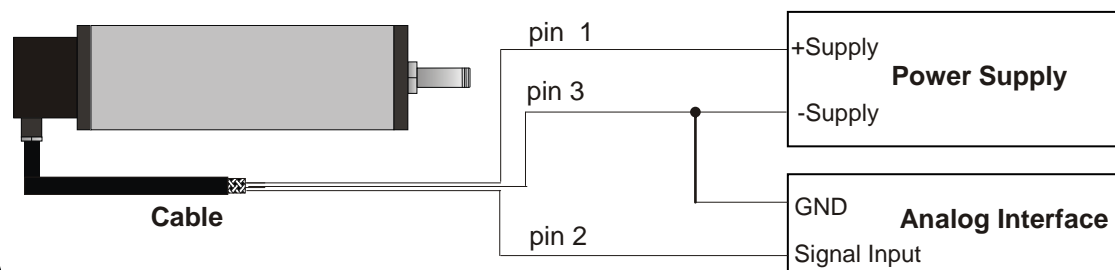



DISTRIBUTOR / DISTRIBUIDOR
Brazil and South America / Brasil e América do Sul



www.metrolog.net



Metrolog Controles de Medição

Address / Endereço:

Rua Sete de Setembro, 2656
13560-181 - São Carlos - SP
Brazil / Brasil

Phone / Telefone:

+55 (16) 3371-0112
+55 (16) 3372-7800

Internet:

www.metrolog.net
metrolog@metrolog.net

Atek Sensor Technology A.S.



Tuzla Kimya Sanayicileri Org. San. Bolg. Melek Aras Bulvari, No:67 34956 Tuzla-Istanbul / TURKEY
Tel: +90 216 399 44 04 Fax: +90 216 399 44 02
www.ateksensor.com info@ateksensor.com