


# LTC SERIES LINEAR POTENTIOMETER

“Quick Connect Guide with Voltage Output”


## WARNING !

Never connect the power supply cable to pin 2 while socket connection. Otherwise the scale card circuit and contacts may be damaged. In this case, the device will be **out of warranty**.

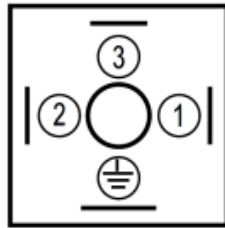

Connections	
Pin 1	+24 VDC Supply
Pin 2	Analog Output 0-10 VDC
Pin 3	Supply GND

**Note:** The GND line of the supply and signal output is common. It can therefore be connected with a 3-wire cable.

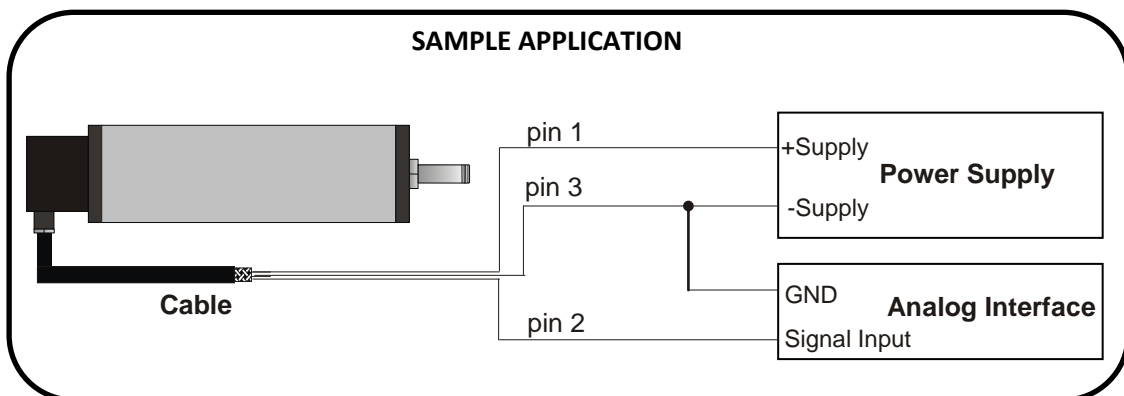



**Address / Endereço:**

Rua Sete de Setembro, 2656  
13560-181 - São Carlos - SP  
Brazil / Brasil

**Phone / Telefone:**

+55 (16) 3371-0112  
+55 (16) 3372-7800

**Internet:**

www.metrolog.net  
metrolog@metrolog.net