


LTC SERIES LINEAR POTENTIOMETER

“Quick Connect Guide with Voltage Output”


WARNING !

Never connect the power supply cable to pin 2 while socket connection. Otherwise the scale card circuit and contacts may be damaged. In this case, the device will be **out of warranty**.

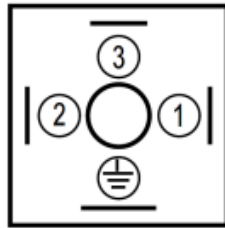

Connections	
Pin 1	+24 VDC Supply
Pin 2	Analog Output 0-10 VDC
Pin 3	Supply GND

Note: The GND line of the supply and signal output is common. It can therefore be connected with a 3-wire cable.

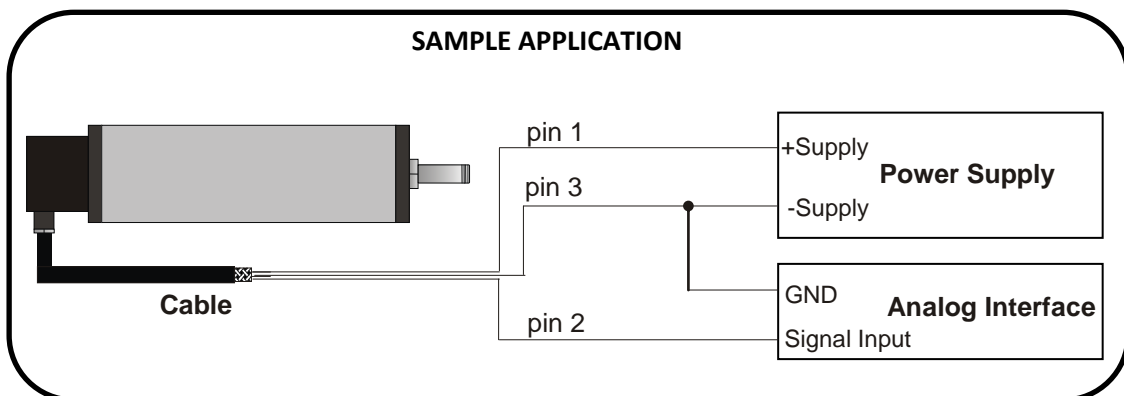



DISTRIBUTOR / DISTRIBUIDOR
Brazil and South America / Brasil e América do Sul



www.metrolog.net



Metrolog Controles de Medição

Address / Endereço:

Rua Sete de Setembro, 2656
13560-181 - São Carlos - SP
Brazil / Brasil

Phone / Telefone:

+55 (16) 3371-0112
+55 (16) 3372-7800

Internet:

www.metrolog.net
metrolog@metrolog.net

Atek Sensor Technology A.S.



Tuzla Kimya Sanayicileri Org. San. Bolg. Melek Aras Bulvari, No:67 34956 Tuzla-Istanbul / TURKEY
Tel: +90 216 399 44 04 Fax: +90 216 399 44 02
www.ateksensor.com info@ateksensor.com