


**WARNING !**


Never connect the power supply to yellow cable. Otherwise the scale card circuit and contacts may be damaged. In this case, the device will be **out of warranty**.



Connections	
RED	+ V
YELLOW	Signal Output
BLACK	0V (GND)

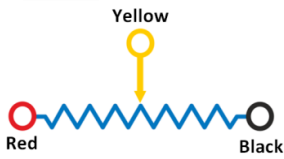


Potentiometric Connection  
(Voltage Divider)

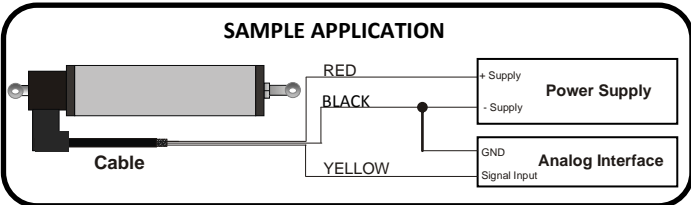


**WARNING !**


Never connect the power supply to yellow cable. Otherwise the scale card circuit and contacts may be damaged. In this case, the device will be **out of warranty**.

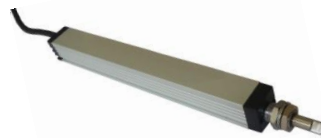

Connections	
RED	+ V
YELLOW	Signal Output
BLACK	0V (GND)

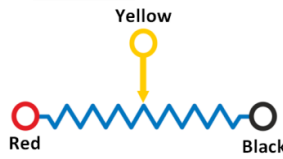

Potentiometric Connection  
(Voltage Divider)

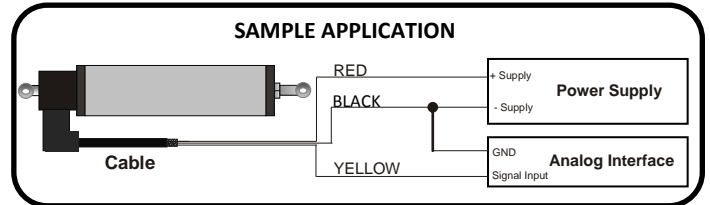


**WARNING !**


Never connect the power supply to yellow cable. Otherwise the scale card circuit and contacts may be damaged. In this case, the device will be **out of warranty**.



Connections	
RED	+ V
YELLOW	Signal Output
BLACK	0V (GND)

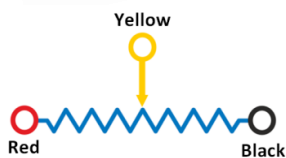

Potentiometric Connection  
(Voltage Divider)

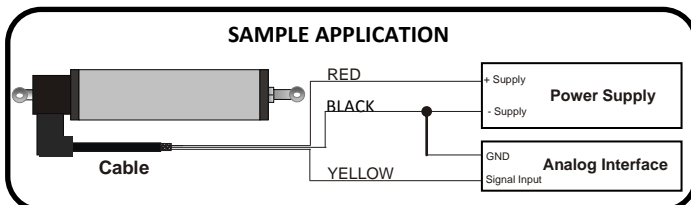


**WARNING !**


Never connect the power supply to yellow cable. Otherwise the scale card circuit and contacts may be damaged. In this case, the device will be **out of warranty**.



Connections	
RED	+ V
YELLOW	Signal Output
BLACK	0V (GND)

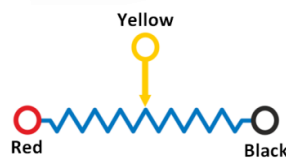

Potentiometric Connection  
(Voltage Divider)

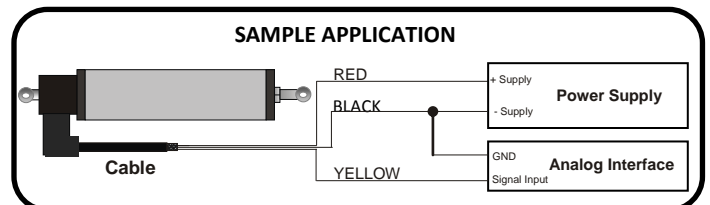



**Address / Endereço:**

Rua Sete de Setembro, 2656  
13560-181 - São Carlos - SP  
Brazil / Brasil

**Phone / Telefone:**

+55 (16) 3371-0112  
+55 (16) 3372-7800

**Internet:**

www.metrolog.net  
metrolog@metrolog.net