


GENERAL INFORMATION

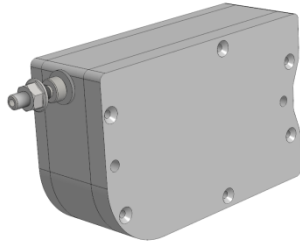

AWP 810 series draw wire sensors; consists of a rotary potentiometer which is controlled by stainless steel wire. They make measurement by pulling and rewinding stainless steel wire. Different measuring lengths from 2000 mm to 5100 mm are available. They convert linear motion to potentiometric output.

The "A" series, works with 24VDC supply and gives of 4-20 mA analog output with the help of the converter card.

The "V" series, works with 24VDC supply and gives of 0-10 VDC analog output with the help of the converter card.

Optionally, redundant output, different non-standard measuring lengths, cable length or socket model can be requested.

WARNINGS


- The installation of the product is carried out by the customer who purchases the product, according to the wiring diagrams, installation information, etc. in this manual.
- Maintenance and repair should be done by the technicians authorized by the manufacturer firm.
- There must be minimum distance between the sensor and control unit. Avoid additions except the suitable connector unless it needs.
- Keep away the sensor cable from as high power energy cables, contactor, motor, switched power supplies, inductive and capacitive noisy supplies.
- Shielding edge of the sensor cable must be ground connected.
- Not to damage the sensor supply directions and voltage must be paid attention. Don't energize before all connections completed.
- Transport and storage should be at their original packaging and an ambient temperature of -25°C / + 85°C in such a way that they will not be exposed to dust, humidity, impact, vibration, falling or water.
- Chemicals such as alcohol, thinner etc. should not be used for cleaning the product. The product should be wiped with a damp cloth.
- The product may be damaged and may become unusable if used outside of the specifications in the user manual.
- The product will be out of warranty if used outside of the specifications in the user manual and opened or repaired other than authorized services.

ELECTRICAL CONNECTIONS


Never make or undo electrical connections to the sensor when voltage is applied, otherwise this may result in damage to devices. AWP 810 can be optionally requested as single output or redundant.

| 0-10V or POTENTIOMETER Connection | | |
|-----------------------------------|-------------|-----------------------|
| Signal | Cable Color | M12 5 pin male socket |
| Earth | Silver | Pin 1 |
| +V | Red | Pin 2 |
| 0V | Black | Pin 3 |
| 0-10V / Pot | Yellow | Pin 4 |
| - | - | Pin 5 |


| 4-20 mA Connection | | |
|--------------------|-------------|-----------------------|
| Signal | Cable Color | M12 5 pin male socket |
| Earth | Silver | Pin 1 |
| +V | Red | Pin 2 |
| - | - | Pin 3 |
| 4-20 mA | Yellow | Pin 4 |
| - | - | Pin 5 |

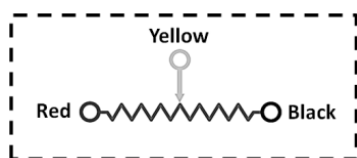

M12 5 Pin Male Socket

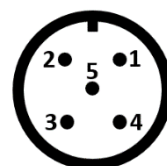

M12 5 Pin Female Socket

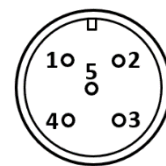


* 1 pcs M12 5 pin male connector is used as standard for single output models

* Redundant models have two outputs. 1 pcs M12 5 pin male and 1 pcs M12 5 pin female sockets are used as standard.

* Different socket models can be requested optionally.

MECHANICAL MOUNTING

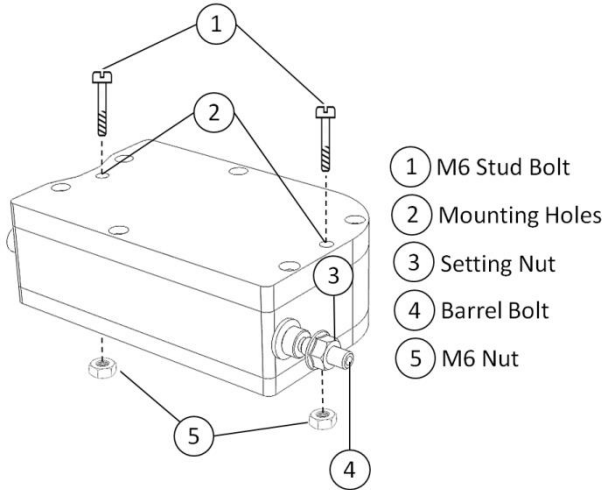


1-The product should be mounted to the relevant area with 2 units M6 stud bolts(1) and nuts(5) from the mounting holes (2) according to the mounting directions shown on page 3.

2-The sensor wire should be pulled towards the position to be connected with the barrel bolt (4).

3-The sensor wire should be mounted on the device to be connected by using the setting nut (3).

DIMENSIONS

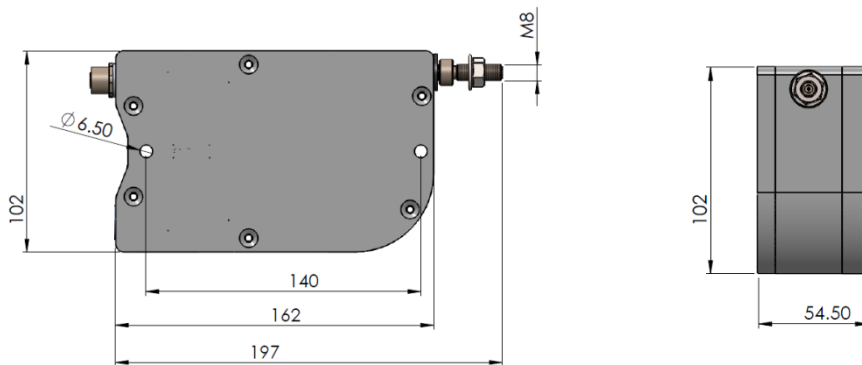


TECHNICAL SPECIFICATIONS

| | | | |
|-----------------------------------|--|---------------------------------|----------------------------------|
| *Stroke (measuring) length | Different measuring lengths from 2000 mm to 5100 mm | Required Force | 12 N |
| Linearity | $\pm 0.25\%$ FS | Operating Temperature | -25°C ... +85°C |
| *Supply Voltage | 'A' and 'V' models: 24 VDC | | |
| | Potentiometric output model: 42V max. | | |
| *Signal Output Type | Potentiometric | Materials | Housing: Aluminum/steel /plastic |
| | 0-10 VDC 4-20 mA (Optionally Redundant Output) | | Measuring Wire: Stainless steel |
| Measuring Type | Potentiometric | *Connection cable length | 3m (standard), 5m, 10m |
| *Resistance | 5 K Ω (standard), 10 K Ω | IP Protection Class | IP65 |
| Maximum Speed | 2 m/s | Weight | ≈ 2200 gr |






Note: The technical specifications indicated by (*) vary according to the selected model. The detailed code table is shown on page 4.

MOUNTING AND USAGE WARNINGS




1. Never release the wire after pulling. Otherwise, the coil spring will be damaged.

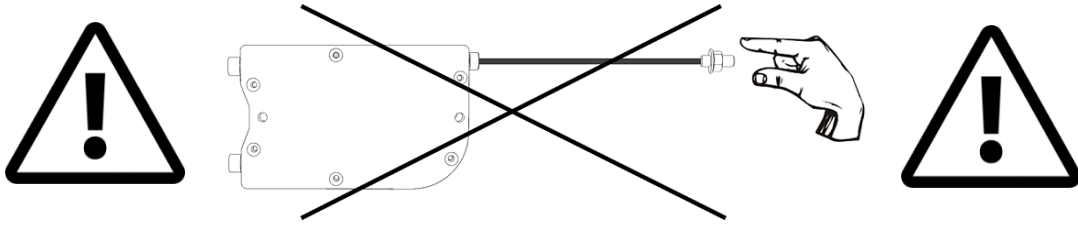



2. Mount the sensor according to the mounting directions shown below.

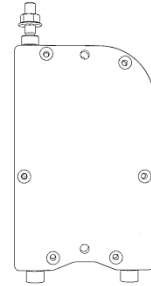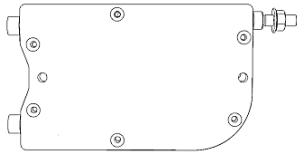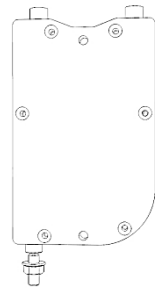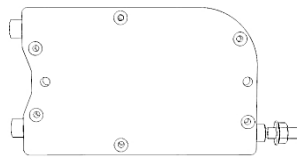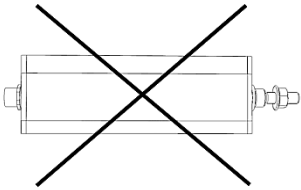

3. If there is a trickle of water (like a rain), the wire outlet must not be a drip of water upstream. If needed please use guide rollers.

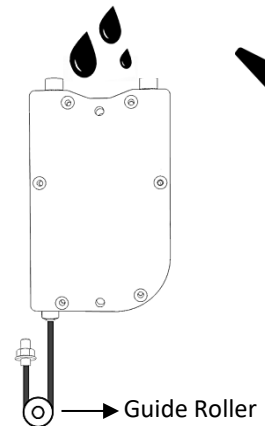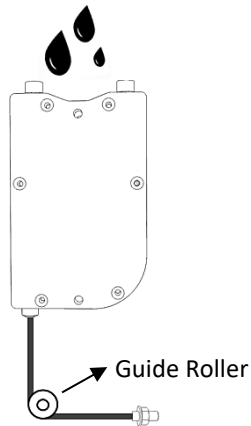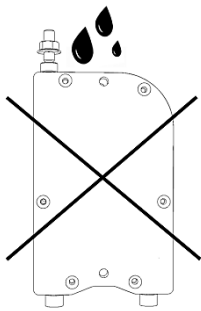

4. The wire should not be pulled in angular. If needed, please use guide rollers.

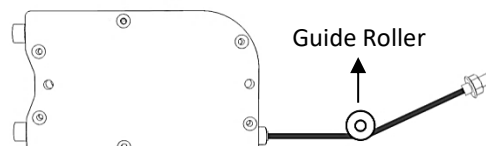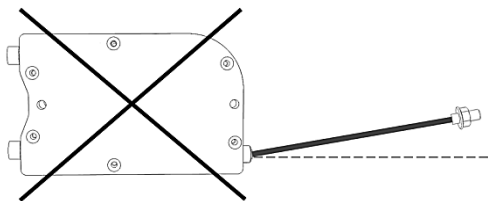

Important Note(!): Failure to comply with these recommendations, the malfunctions that may occur will not be under the warranty.

BOX CONTENTS

| Product | Description |
|-------------|------------------|
| AWP 810 | Draw Wire Sensor |
| User Manual | 1 pcs |

PRODUCT CODE TABLE

| Model | Resistance ⁽²⁾ | Output Signals |
|---------|---|---|
| AWP 810 | 5K: 5 K Ω (standard) 10K: 10 K Ω | No Code : Potentiometric V : 0-10 VDC A : 4-20 mA |
| AWP 810 | XXX | XX |
| | XX | X |
| | | XX |
| | | XX |

| Stroke Length ⁽¹⁾ | Electrical Connection ⁽³⁾ | Output Type |
|---|---|--|
| Different measuring lengths from 2000 mm to 5100 mm | 3M : 3 m 5M : 5 m 10M : 10 m S13F : M12 5 pin female socket S13M : M12 5 pin male socket S13FM: M12 5 pin female + M12 5 pin male socket (available on redundant models) | No Code : Single Output Dual : Redundant Output |

(1) For other (special production) stroke lengths, please contact us.

(2) For other resistance options, please contact us.

(3) As standard;

For single output models.1 pcs M12 5 pin male socket (S13M) is used.

For redundant models, 1 pcs M12 5 pin female + 1 pcs M12 5 pin male socket (S13FM) is used.

Please contact us for other socket model requests.

Sample Code 1: AWP-810-3000-5K-S13F-A-DUAL

Explanation: AWP 810 series, 3000 mm stroke, 5K resistance, 2 pcs M12 5 pin female socket, current output, redundant output

Sample Code 2: AWP-810-3000-5K-S13FM-DUAL

Explanation: AWP 810 series, 3000 mm stroke, 5K resistance, 1 pcs M12 5 pin female + 1 pcs M12 5 pin male socket, potentiometric output, redundant output



Manufacturer Firm's Title, Address Details

Manufacturer Firm: ATEK ELEKTRONİK SENSÖR TEKNOLOJİLERİ SANAYİ VE TİCARET A.Ş.

Address: Gebze OSB Mahallesi, 800. Sokak, No:814/1 Gebze, KOCAELİ/TURKEY

TEL: +90 262 673 76 00 **FAX:** +90 262 673 76 08

Web: www.ateksensor.com **E-mail:** info@ateksensor.com

Authorized Service's Title, Address Details

Authorized Service: ATEK ELEKTRONİK SENSÖR TEKNOLOJİLERİ SANAYİ VE TİCARET A.Ş.

Address: Gebze OSB Mahallesi, 800. Sokak, No:814/1 Gebze, KOCAELİ/TURKEY

TEL: +90 262 673 76 00 **FAX:** +90 262 673 76 08

Web: www.ateksensor.com **E-mail:** info@ateksensor.com



Disposal of Packagings: Packaging materials consist of recyclable materials. For providing recycling, please dispose waste packagings to collecting points of authorized recycling facilities.

Disposal of E-Waste: This device is in conformity with WEEE Directive and consists of recyclable materials. This product should not be disposed with general waste for preventing negative effects on environment and human health. This product should be disposed to collecting points of authorized recycling facilities. Further information can be reached from authorized unit.



Address / Endereço:

Rua Sete de Setembro, 2656
13560-181 - São Carlos - SP
Brazil / Brasil

Phone / Telefone:

+55 (16) 3371-0112
+55 (16) 3372-7800

Internet:

www.metrolog.net
metrolog@metrolog.net